

Honda 1988-01 CR250 Gearing Chart

Front	Rear	3rd Gear	4th Gear	5th Gear		
13	50	13.97	11.54	10.03	3rd	1.21
13	49	13.69	11.31	9.83	4th	1
13	48	13.41	11.08	9.63	5th	0.869
13	47	13.13	10.85	9.43		
14	50	12.97	10.72	9.32		
13	46	12.85	10.62	9.23		
14	49	12.71	10.50	9.13		
13	45	12.57	10.39	9.03		
14	48	12.45	10.29	8.94		
13	44	12.29	10.16	8.83		
14	47	12.19	10.08	8.76		
15	50	12.11	10.00	8.69		
13	43	12.01	9.93	8.63		
14	46	11.93	9.86	8.57		
15	49	11.86	9.80	8.52		
13	42	11.73	9.70	8.43		
14	45	11.67	9.65	8.38		
15	48	11.62	9.60	8.35		
13	41	11.45	9.47	8.23		
14	44	11.41	9.43	8.20		
15	47	11.38	9.40	8.17		
16	50	11.35	9.38	8.15		
13	40	11.17	9.24	8.03		
14	43	11.15	9.22	8.01		
15	46	11.14	9.20	8.00		
16	49	11.12	9.19	7.99		
16	48	10.90	9.00	7.82		
15	45	10.90	9.00	7.82		
14	42	10.90	9.00	7.82		
13	39	10.90	9.00	7.82		
16	47	10.67	8.82	7.66		
15	44	10.65	8.80	7.65		
14	41	10.64	8.79	7.64		
13	38	10.62	8.77	7.62		
16	46	10.44	8.63	7.50		

15	43	10.41	8.60	7.48
14	40	10.38	8.58	7.45
13	37	10.34	8.54	7.42
16	45	10.21	8.44	7.34
15	42	10.17	8.40	7.30
14	39	10.12	8.36	7.27
13	36	10.06	8.31	7.22
16	44	9.99	8.25	7.17
15	41	9.93	8.20	7.13
14	38	9.86	8.15	7.08
13	35	9.78	8.08	7.02
16	43	9.76	8.07	7.01
15	40	9.68	8.00	6.96
14	37	9.60	7.93	6.89
16	42	9.53	7.88	6.85
13	34	9.50	7.85	6.82
15	39	9.44	7.80	6.78
14	36	9.34	7.72	6.71
16	41	9.31	7.69	6.68
15	38	9.20	7.60	6.61
16	40	9.08	7.50	6.52
14	35	9.08	7.50	6.52
15	37	8.96	7.40	6.43
16	39	8.85	7.32	6.36
14	34	8.82	7.29	6.33
15	36	8.72	7.20	6.26
16	38	8.63	7.13	6.19
15	35	8.47	7.00	6.09
16	37	8.40	6.94	6.03
15	34	8.23	6.80	5.91
16	36	8.17	6.75	5.87
16	35	7.94	6.57	5.71
16	34	7.72	6.38	5.54